 
 
 
 



Channel	Function	Description
CH 1	Dimmer	000-007 Dimmer 0-100% 008-255 
CH 2	Red	000 CH 1 open 255 
CH 3	Green	000 CH 1 open 255 
CH 4	Blue	000 CH 1 open 255 
CH 5	Strobe	000-010 011-025 026 strobe speed 225 226-255 
CH 6	Auto 自	