


/ RED BUTTON.

/ MAIN PARTS

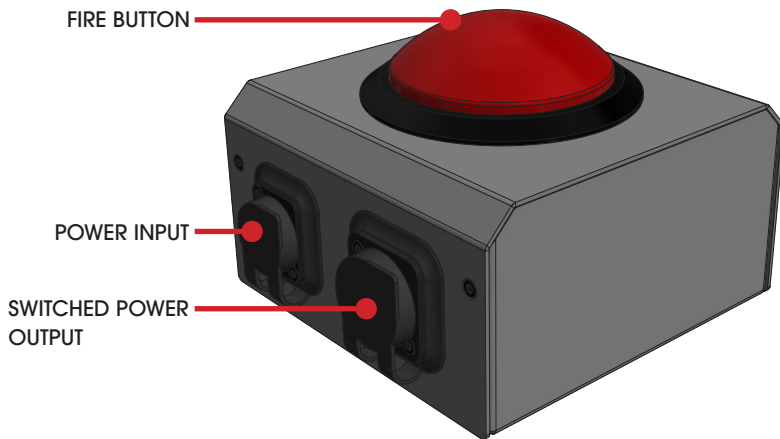

/ LET'S FIRE

CONNECT THE RED BUTTON

1. Place the RED BUTTON on a stable surface.
2. Make sure the FIRE button is not pressed.
3. Connect the desired device(s).
4. Connect the RED BUTTON to a power outlet, if the button lights up it is ready to use.

CONTROL THE RED BUTTON

5. Push the button.
6. Enjoy the view!

/ TECHNICAL DATA

Product	Product Name	MAGICFX® RED BUTTON		
	Product Code	MFX3204		
	Product Type	CONTROL GEAR		
Main	Length	153 mm	6 in	
	Dimensions	Width	140 mm	5.5 in
		Height	110 mm	4.3 in
Weight	Weight	1.2 kg	2.65 lb	
Environment	Minimum Temperature	0 °C	32 °F	
	Maximum Temperature	60 °C	122 °F	
	Humidity (Relative)	20 % to 90 % (non condensing)		
Electrical	Voltage Input	100 – 240 Vac		
	Voltage Frequency	50 – 60 Hz		
	Power Output Max.	3600 W		
	Power Connector	Neutrik® powerCON TRUE1 (in & out)		