

On/Off

EK

SKP

SKM-S

SK

Off -> On

On -> Off


short

on

long

off

EK Setup

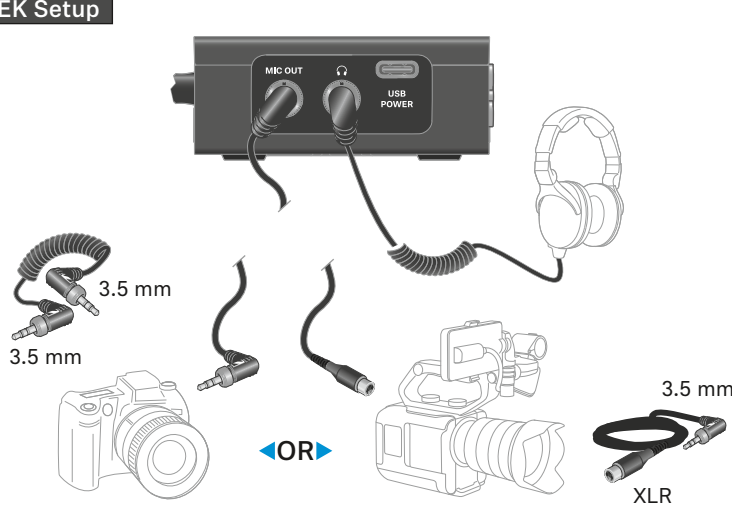

3.5 mm

3.5 mm

3.5 mm

XLR

OR



www.sennheiser.com/download

Smart Assist

Download on the App Store

GET IT ON Google Play

Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 05/24, 592859/A05



Evolution Wireless Digital Portable

EW-DP EK, EW-D SK, EW-DP SKP, EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guía rápida
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
简要说明
快速使用指南
クイックガイド
요약 안내서


SENNHEISER

Mute

SK

SKP

SKM-S

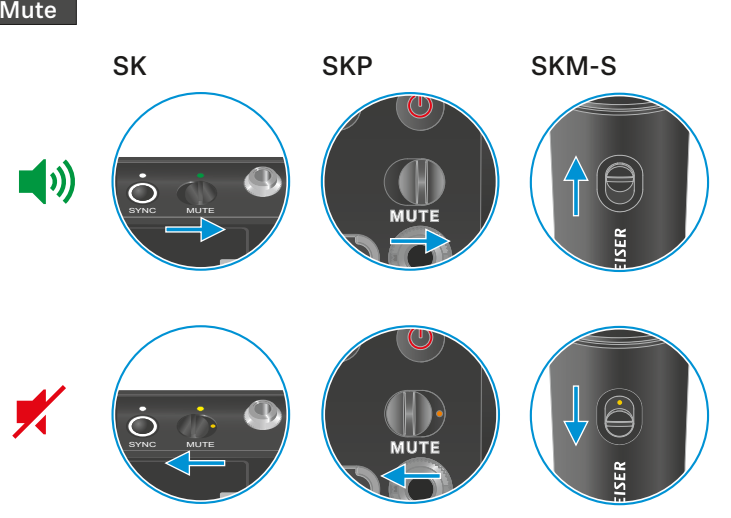


EK Power Supply / Charging



USB-C Power

Powerbank

EW-DP EK

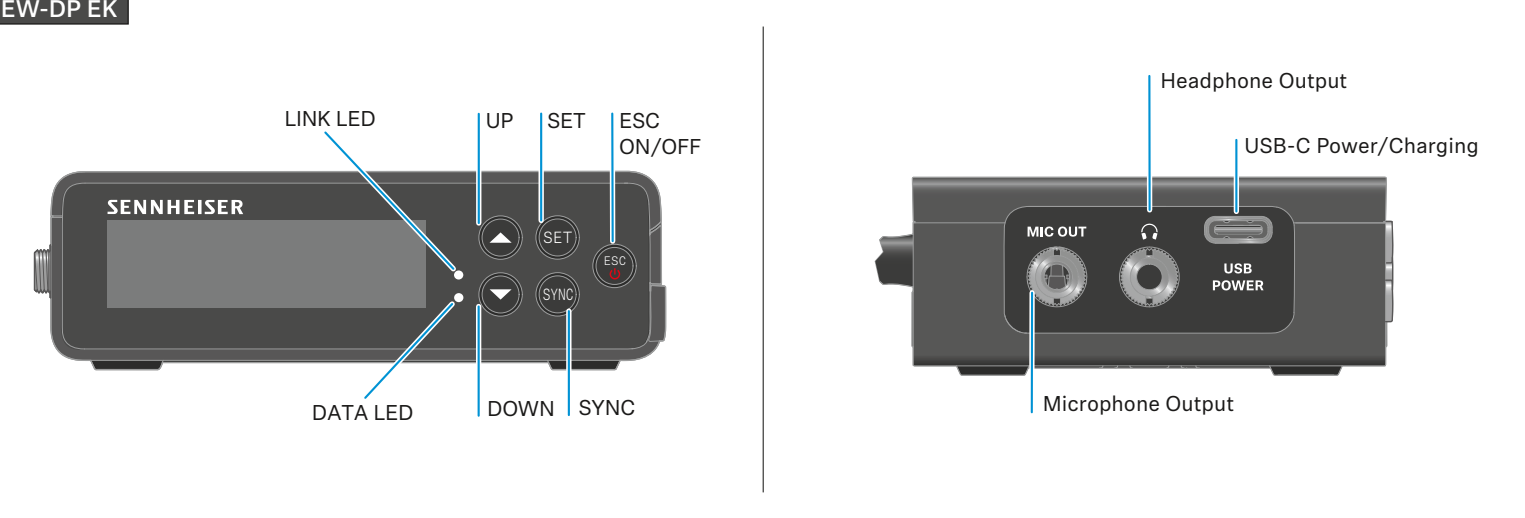

LINK LED

DATA LED

UP

DOWN

SET

SYNC

ESC ON/OFF


Headphone Output

USB-C Power/Charging

Microphone Output

Battery

EK

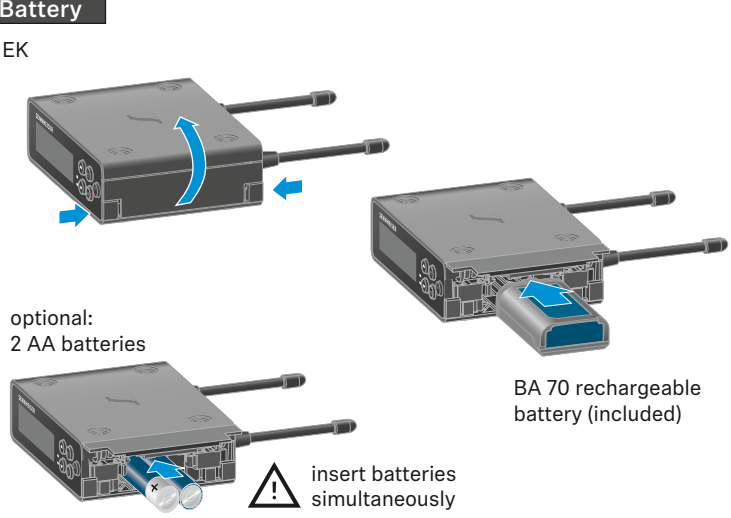


optional: 2 AA batteries

BA 70 rechargeable battery (included)

insert batteries simultaneously


SKP

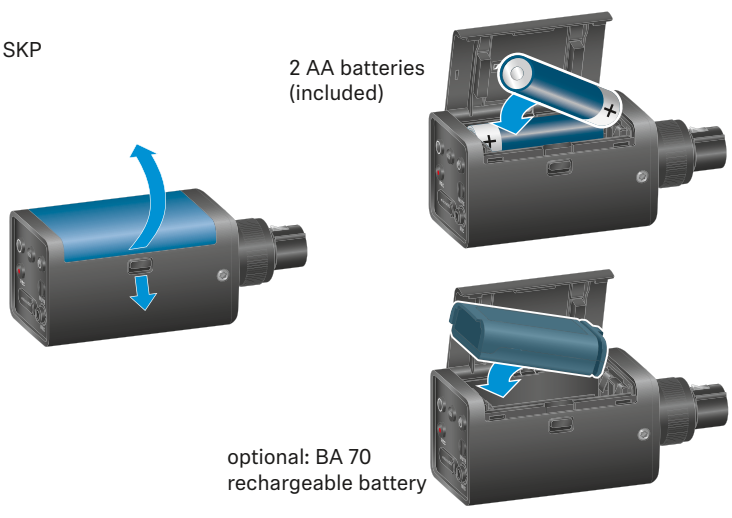

2 AA batteries (included)

optional: BA 70 rechargeable battery

EW-DP SKP

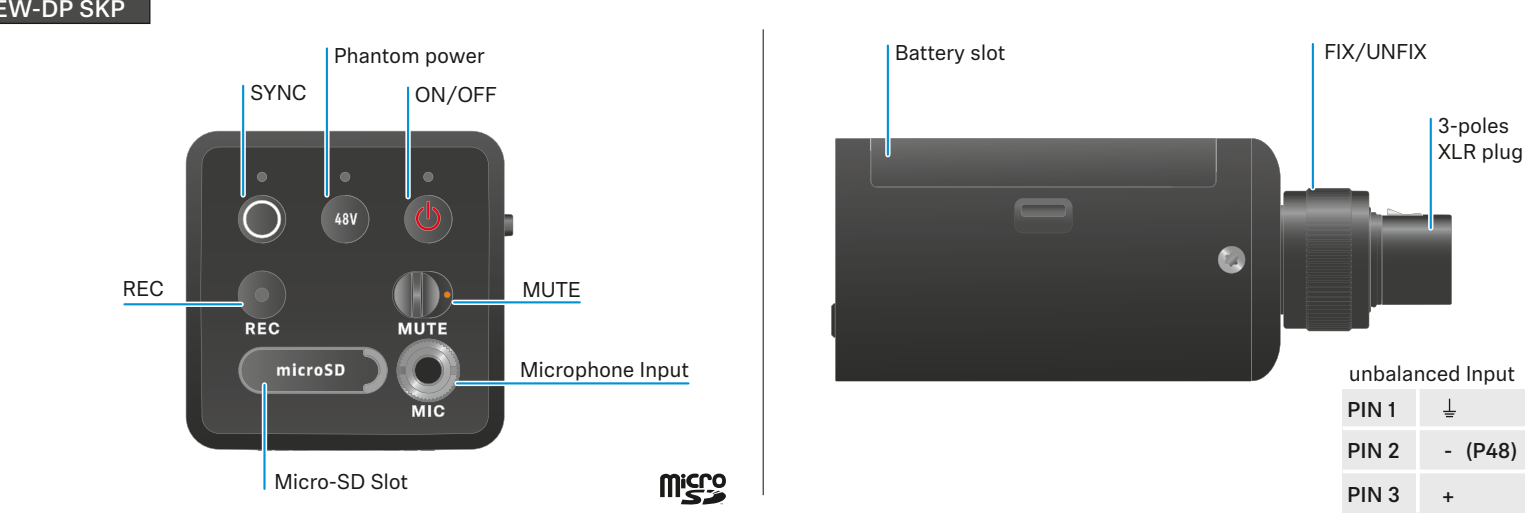

SYNC

Phantom power

ON/OFF

REC

MUTE

Microphone Input

Micro-SD Slot

microSD

MicroSD

Battery slot

FIX/UNFIX


3-poles XLR plug

PIN 1	↓
PIN 2	- (P48)
PIN 3	+

unbalanced Input

Battery


SK

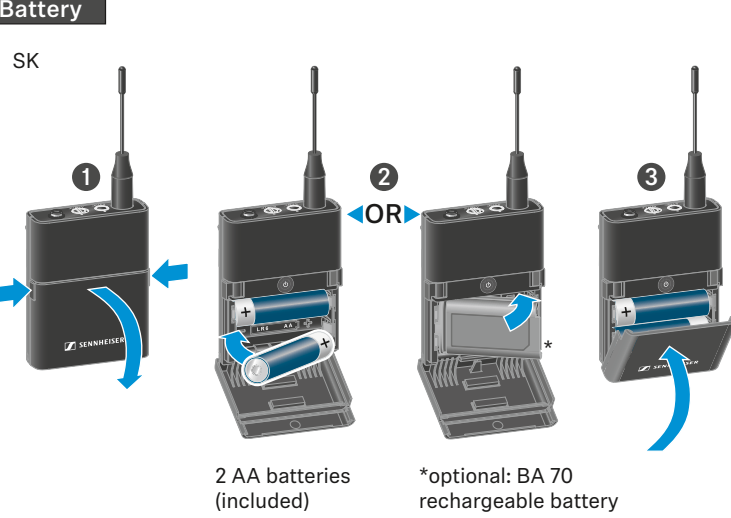

2 AA batteries (included)

*optional: BA 70 rechargeable battery

SKM-S

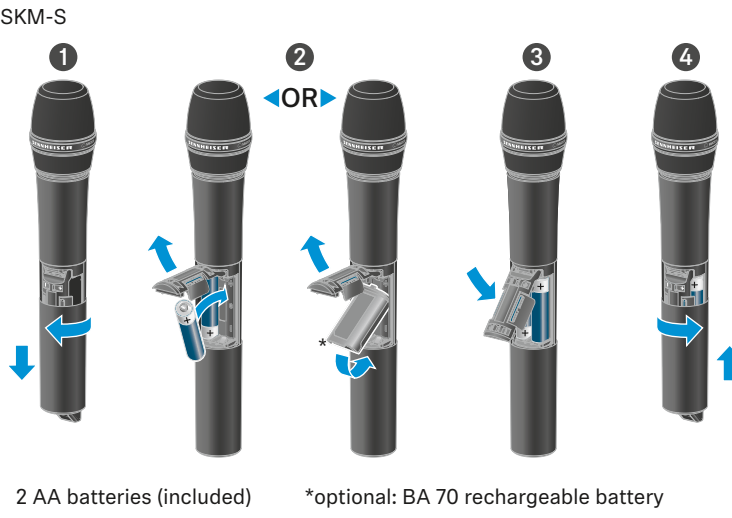

2 AA batteries (included)

*optional: BA 70 rechargeable battery

EW-D SKM-S



ON/OFF


DATA LED

SYNC

LINK LED

MUTE

EW-D SK

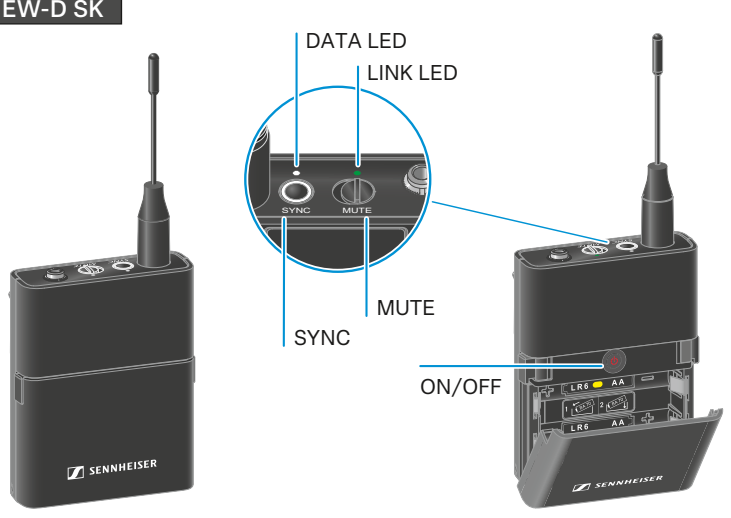

DATA LED

LINK LED

 
SYNC

MUTE


ON/OFF

EK Display

Default screen



PRESS 

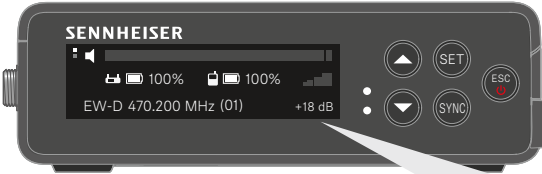

 → 

Instruction Manual

Display page

Mute switch

Receiver battery (EK)

Transmitter battery (SK or SKM-S)

Transmitter audio level

PEAK display

EW-D 470.200 MHz (01)

 
Frequency

Channel

Gain

Radio frequency level

EK Menu



→ SET →

Gain

Output level

SET

↓

→ SET →

Gain

+24

Gain +21 dB

+18

SET

↓

Output level

Headphone

SET

↓

→ SET →

Output level

0 dB

Output level -15 dB

-20 dB

SET

↓

Headphone

Mute switch

SET

↓

→ SET →

Headphone

Mute switch ignored

active

SET

↓

Mute switch

Auto scan

SET

↓

→ SET →

Mute switch

Auto scan

526.000 MHz (94)

SET

↓

Auto scan

Channel

SET

↓

→ SET →

Auto scan

93

Channel 94

526.000 MHz

1

SET

↓

Channel

Frequency

SET

↓

→ SET →

Channel

471

Frequency 470 .200 MHz

526

SET

↓

Frequency

Brightness

SET

↓

→ SET →

Frequency

80

Brightness 60 %

40

SET

↓

Brightness

Reset

SET

↓

→ SET →

Brightness

Reset to factory defaults?

Yes SET

No ESC

Reset

↑

 → 

www.sennheiser.com/download

Instruction manual
Bedienungsanleitung
Notice d'emploi
Istruzioni per l'uso
Instrucciones de manejo
Manual de instruções
Gebruiksaanwijzing
Instrukcja obsługi
Bruksanvisning
Betjenings vejledning
Käyttöohje
Οδηγίες λειτουργίας
Kullanım kılavuzu
Инструкция по эксплуатации
使用说明书
取扱説明書
사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play


LEDs

LINK LED/
PWR LED (SKP)



- Link ok
- audio active
- Link ok
- audio muted or
no capsule on SKM
- Link ok
- audio clip
- No link
- Link ok
- Low transmitter
battery
- Device switched off


EK

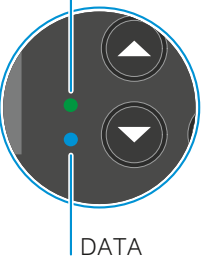

LINK

DATA

SKM-S

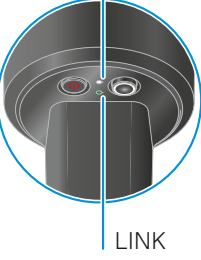

LINK

DATA


SKP



DATA

PWR

SK

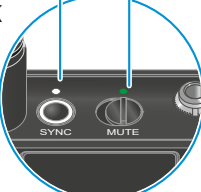

DATA

LINK

DATA LED



Bluetooth active to
- sync with transmitter
- connect with app
Firmware update
in progress

Identify/Battery check

On -> Identify/Check



SK/SKP/SKM-S

Identify/Check

LINK LED SK/SKP/SKM-S



≤ 100 %
≤ 60 %
≤ 20 %


SKM-S




SKP



SK

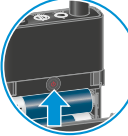


Display of synced EK

 


Sync

 1



EK

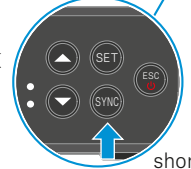

short press

2

OR

SKP



short press

SK



short press

SKM-S




short press

EK Stacking/ Mounting plate



OR

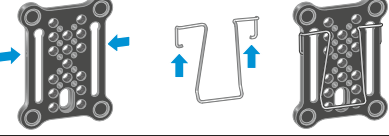





 → 

Mounting instructions

SKP Attach & Record

Attach microphone



1



2

3



Switch on P48
(for condenser mics)

Record

1

insert Micro SD-Card

2

long-long press (11 sec.) ▶ format Micro SD-Card

3

short press ▶ start Rec.

4

long press (3 sec.) ▶ stop Rec.

Rec LED Pattern

→

Online Manual

Mic Handling

SKM-S













ME 2

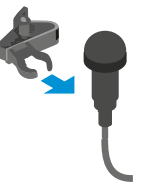


ME 3




ME 4

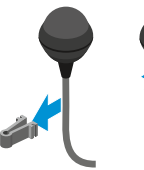

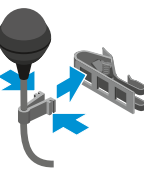



25 cm
(10")

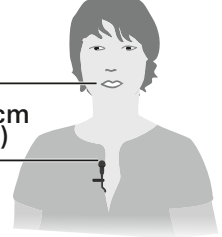

2...3 cm
(1")

