

Antennas

***optional accessories:**
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

Instruction Manual

EW-D Smart Assist

Download on the App Store | GET IT ON Google Play

Sennheiser Documentation App

Download on the App Store | GET IT ON Google Play

or online at www.sennheiser.com/download

EW-DX

Evolution Wireless Digital

EW-DX EM 2
EW-DX SK
EW-DX SKM

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

Sennheiser electronic GmbH & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 04/22, 587467/A01

Audio Out

6.3 mm | XLR-3

OR

Power supply

EU | US | UK | AU | KOR | CN

Remote control

Wireless Systems Manager (WSM)
www.sennheiser.com/wsm

Sennheiser Control Cockpit (SCC)
www.sennheiser.com/control-cockpit-software

EW-D Smart Assist App

Download on the App Store | GET IT ON Google Play

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

2 AA batteries | BA 70 rechargeable battery

2 AA batteries | BA 70 rechargeable battery

EW-DX EM 2

Headphone output | LED ch. 1 | Channel 1 select | UP/DOWN | SET | ESC | Headphone volume control | LED ch. 2 | Channel 2 select | Display | SYNC | ON/OFF

PoE / Network control (WSM / SCC) | Audio outputs | Antenna inputs

On/Off

EM: Off -> On (short), On -> Off (long)

SKM(-S): Off -> On (short), On -> Off (long)

SK: Off -> On (short), On -> Off (long)

Display of SK / SKM(-S)

Device on: CH.NAME 478.125

Device off: CH.NAME 478.125

The display of the SK and SKM(-S) will stay on when the device is switched off.

EW-DX SKM-S | EW-DX SKM





ON/OFF | DATA LED | ESC | UP | Display | LINK LED | SYNC | DOWN | SET | MUTE (EW-DX SKM-S)

EW-DX SK | EW-DX SK 3-PIN

EW-DX SK: 3.5 mm jack, DATA LED, LINK LED, SYNC, MUTE, Display


EW-DX SK 3-PIN: 3 pin socket, ON/OFF, ESC, SET, DOWN, UP

Display

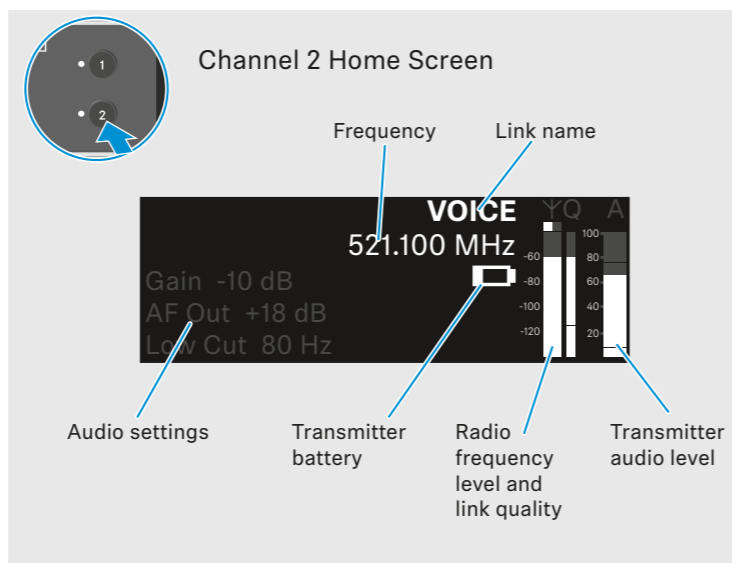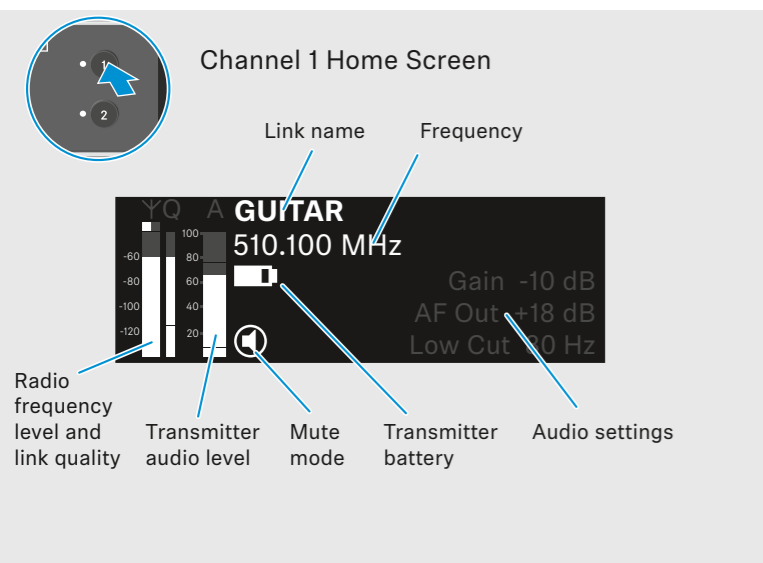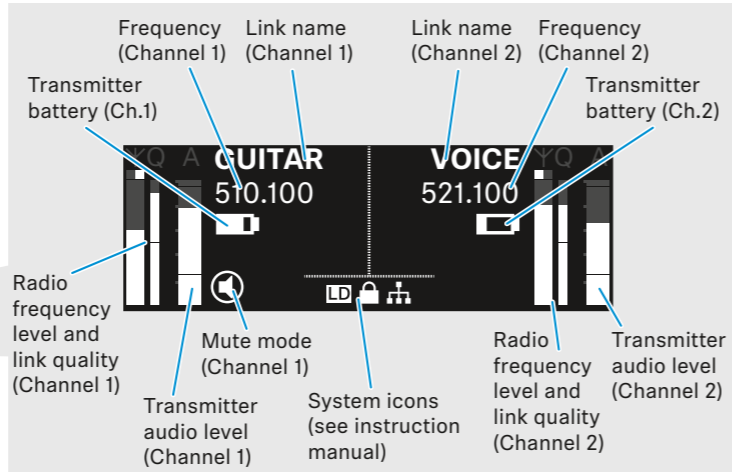
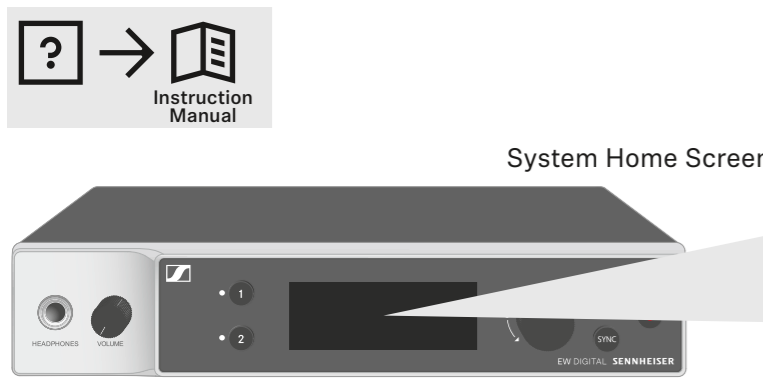


LEDs

LED Ch.1/2 (EM 2)	LINK LED (SK/SKM)
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

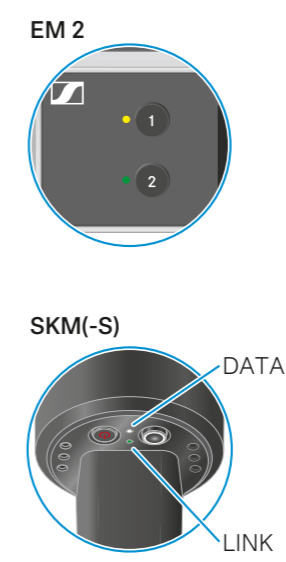


LED Ch.1/2 (EM 2)	DATA LED (SK/SKM)
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

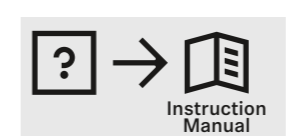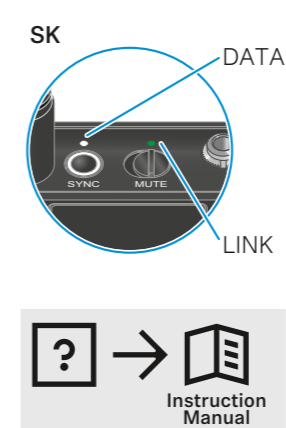


Key Lock




Frequency setup

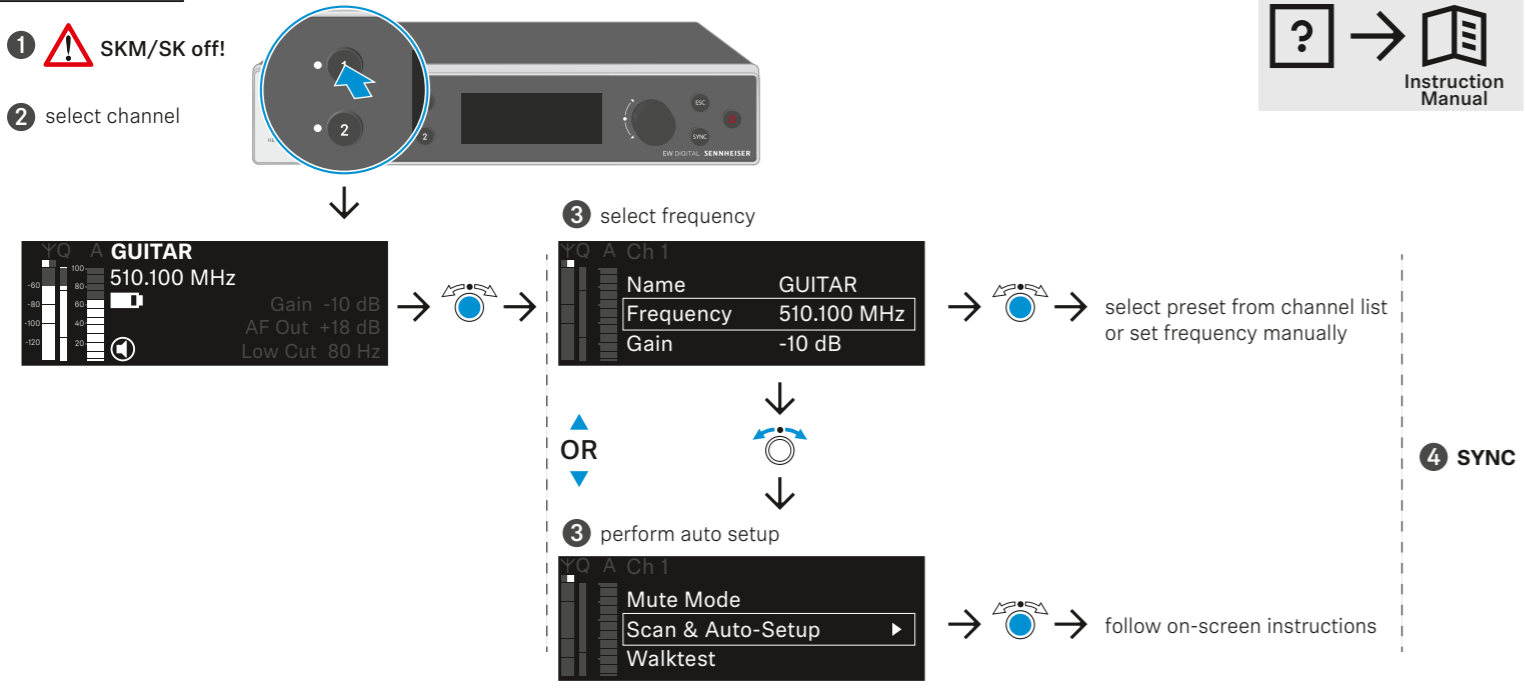

Sync

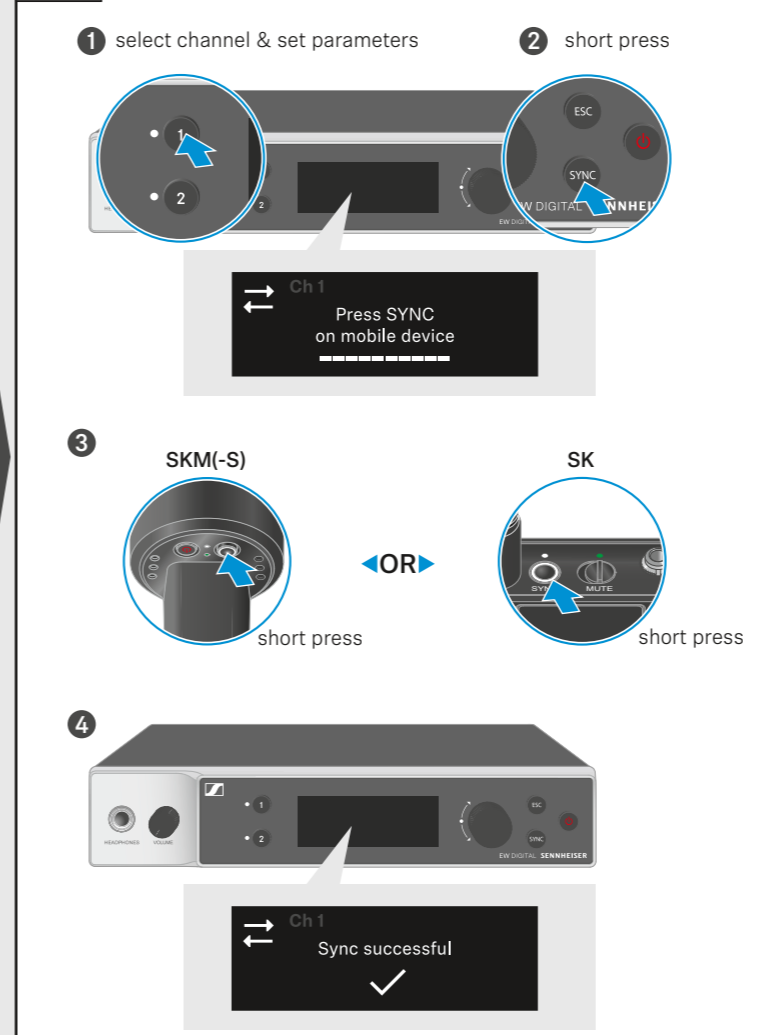

Mute

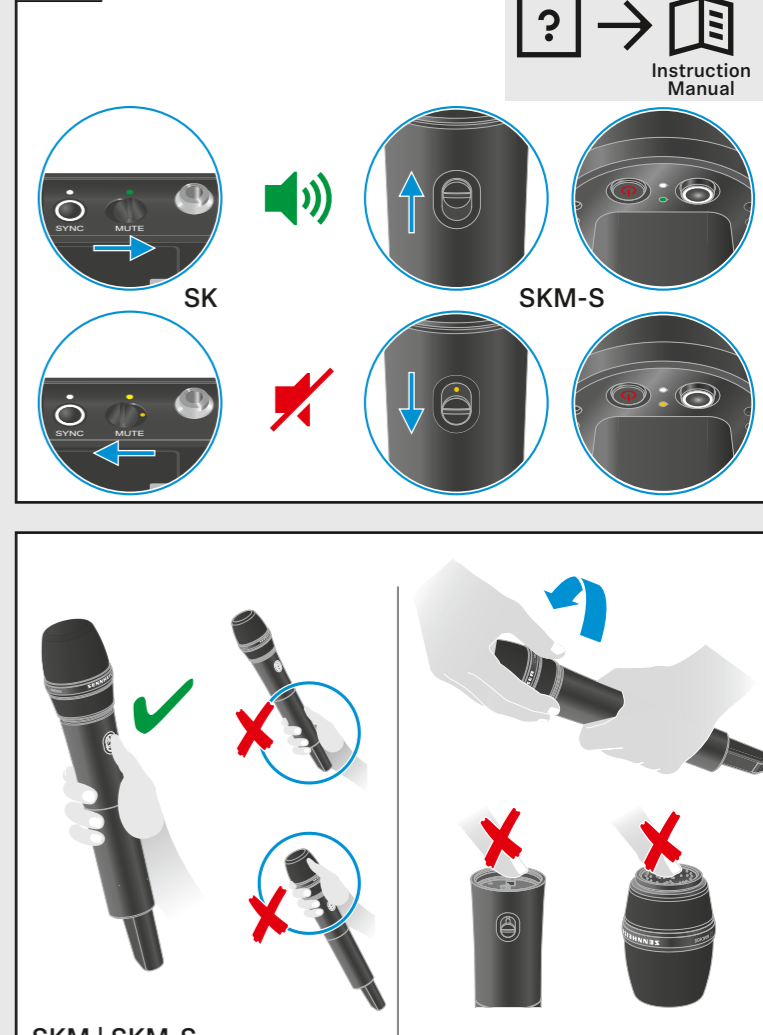

Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso | Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing | Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje | Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 | 取扱説明書 | 사용 설명서 |

Sennheiser Documentation App

Available on the App Store | ANDROID APP ON Google play

EW-D Smart Assist

Available on the App Store | ANDROID APP ON Google play